


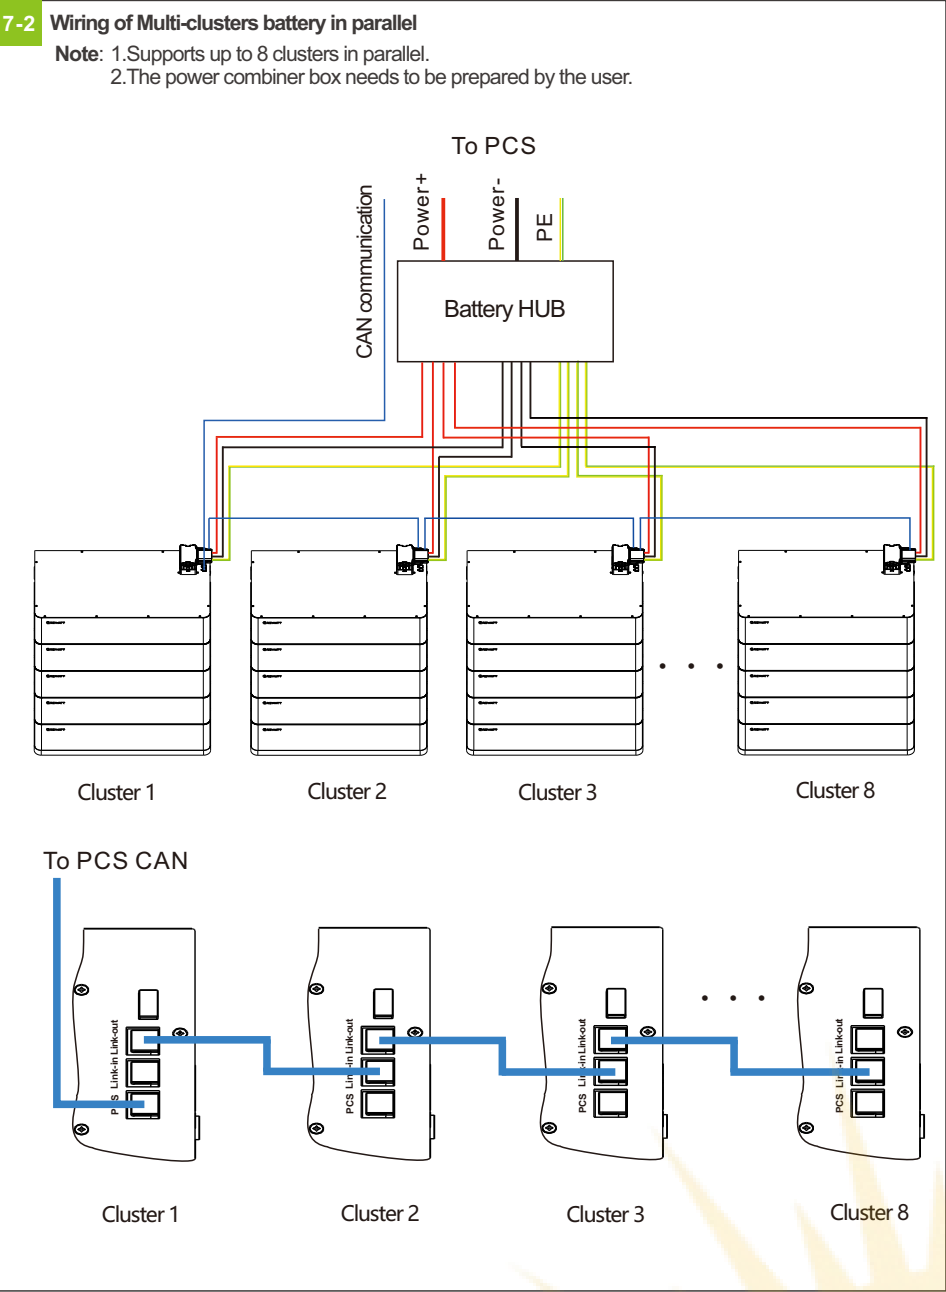

8.Key operation

Power button

Situation	Touch	Definition
System off	Press(< 2S)	No reaction
	Press(≥2S)	Power on
System on	Press once	Shut down

Press →

Note: When multiple battery sytem are used in parallel connection, you only need to press one key of any module to start the system.and also press one key to shut down the battery system.

9.Service and contact

Shenzhen Growatt New Energy CO.,Ltd
4-13/F,Building A,Sino-German,Europe,Industrial Park,
Hangcheng Ave,Guxing Community,Xixiang Subdistrict,
Bao'an District,shenzhen,China.
☎ 86 0755 2747 1942 ✉ service@ginverter.com
W:www.ginverter.com

1.Installation environment


Max. +50°C

Min.0°C


RH. +5%~+85%

Indoor installation

2.Installation tools

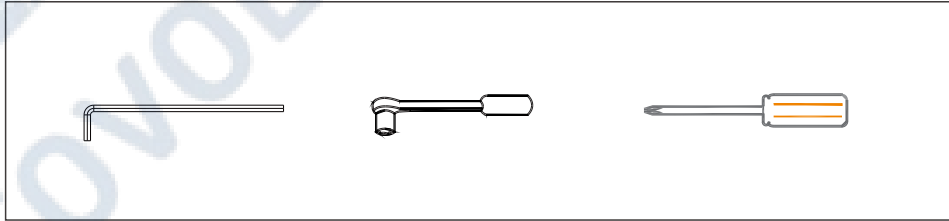

3.Battery size

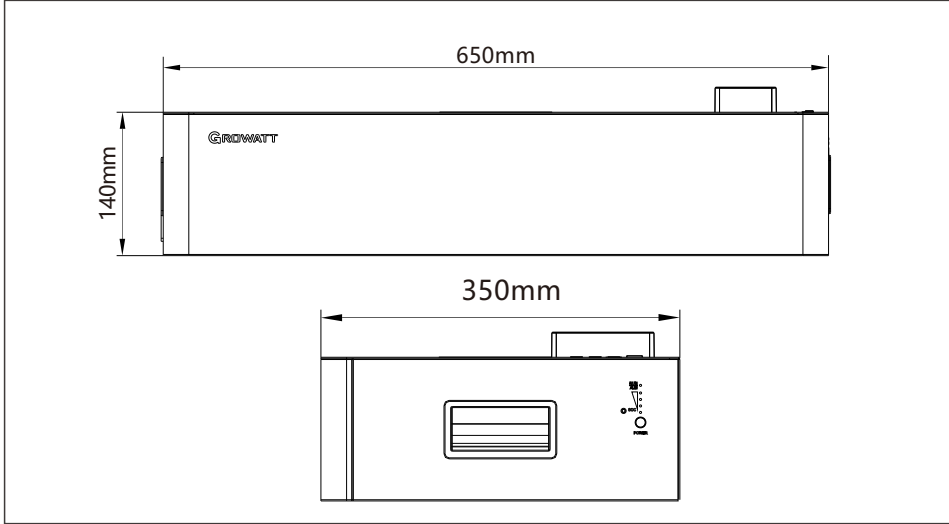

4.Check


4-1 Check AXE 5.0L packing list

AXE 5.0L *1

Quick installation Manual *1
User Manual *1

Warranty card *1
Certificate of conformity *1



4-2 Check accessories

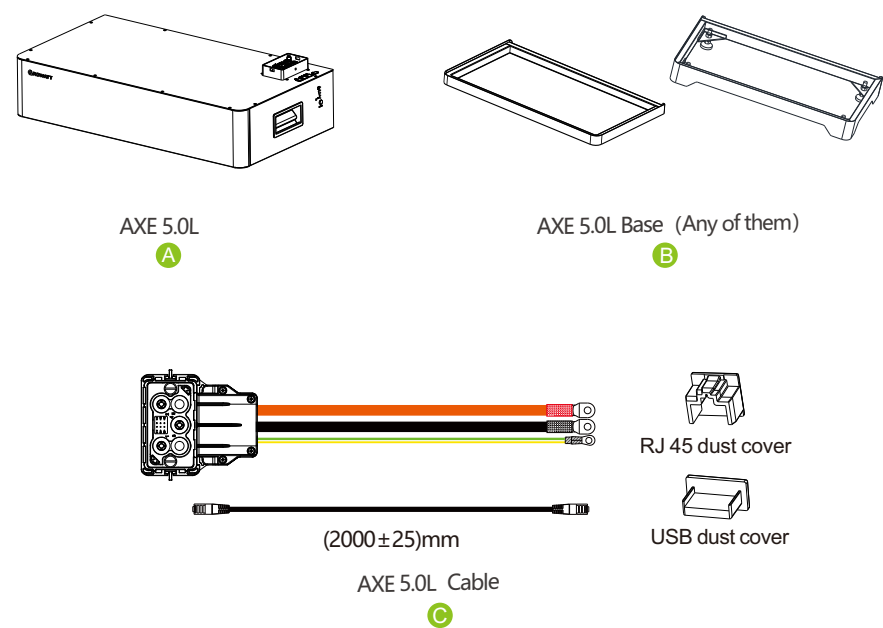

Installation Method	Compound Mode
Standard floor installation	A*M+B+C
Floor installation into N columns	A*M*B*N+C*N

Note: "M" means the number of batteries, "N" means the number of clusters.

5.Battery operation panel introduction

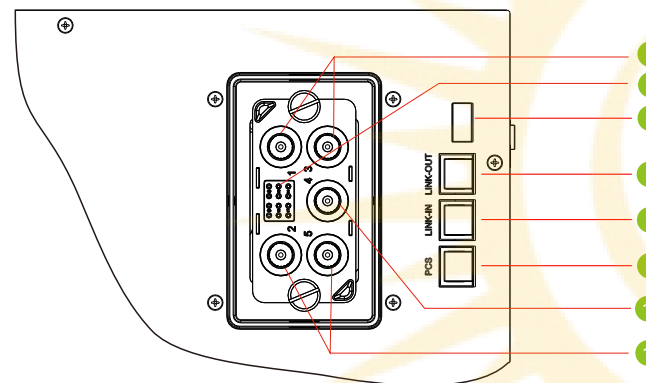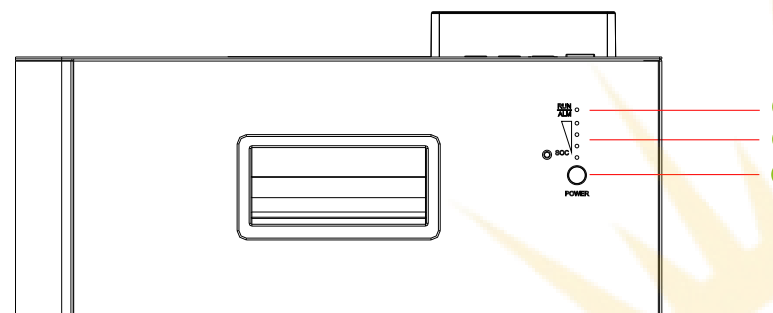


1	Fault light	7	Link-out for multi-cluster in parallel communication
2	SOC light	8	Link-in for multi-cluster in parallel communication
3	Power button	9	PCS CAN communication
4	Positive terminal	10	GND terminal
5	Communication between battery packs of single cluster	11	Negative terminal
6	USB interface		


6.Floor installation with base

6-1 Installation Location Requirements

Note:
1.The battery base is required while installing the battery system .
2. The maximum quantity of stacking battery pack is 10, if it exceeds 10, please install them by the way of multiple clusters in parallel.
3. Please install indoors and ensure the level of the ground.

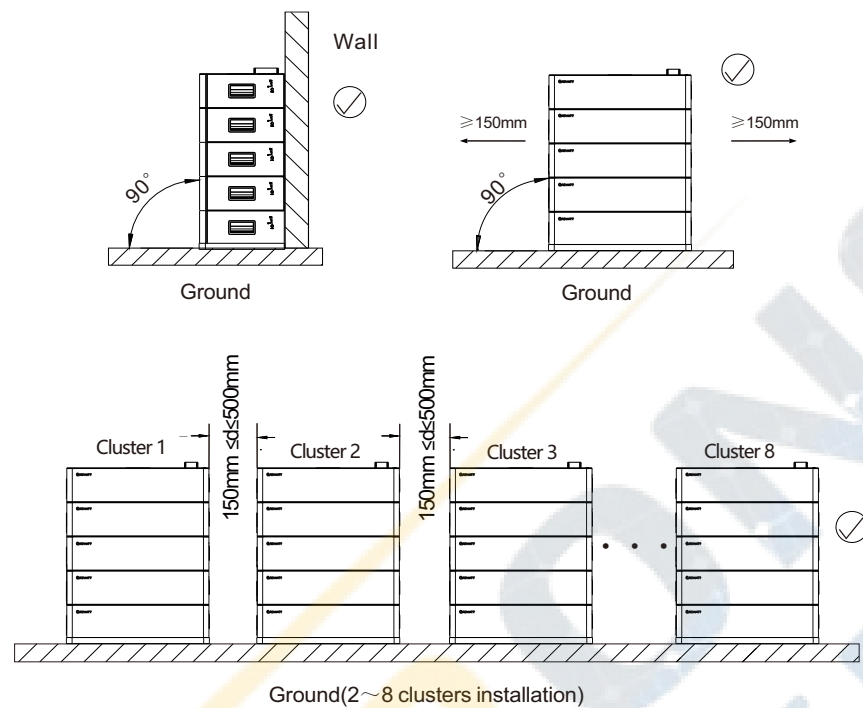


6-2 Installation Procedure

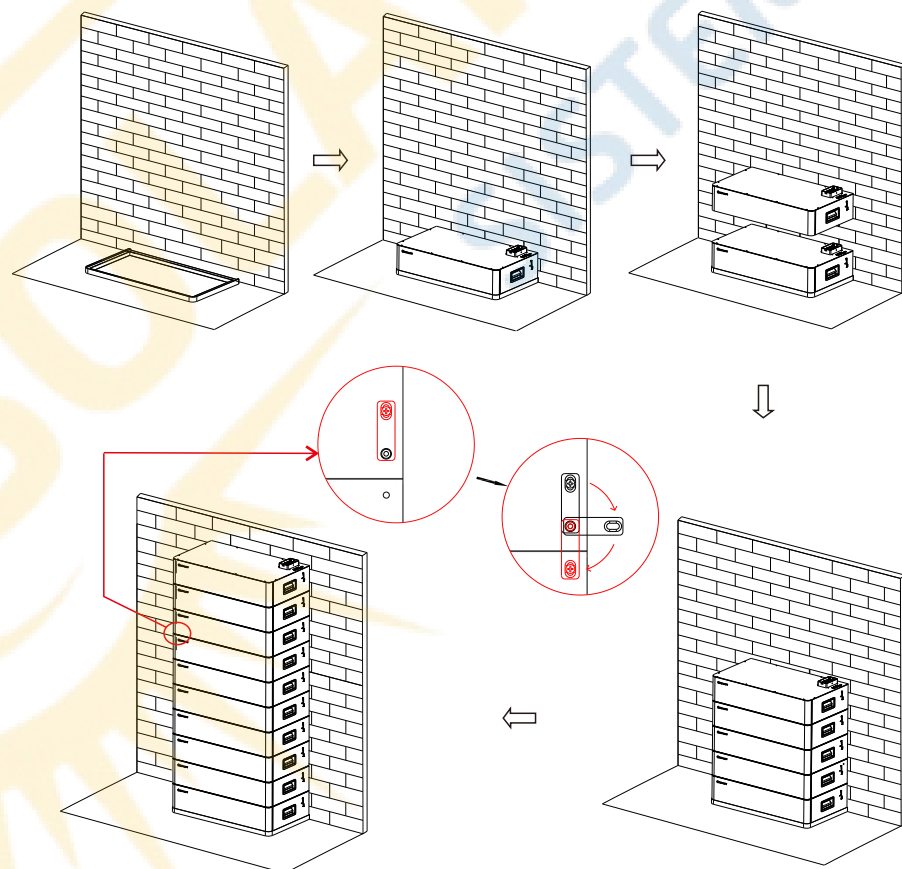

Note: When stacking, make sure that all batteries are aligned and lock the safety bolt.

7.Wiring

7-1 Single cluster wiring

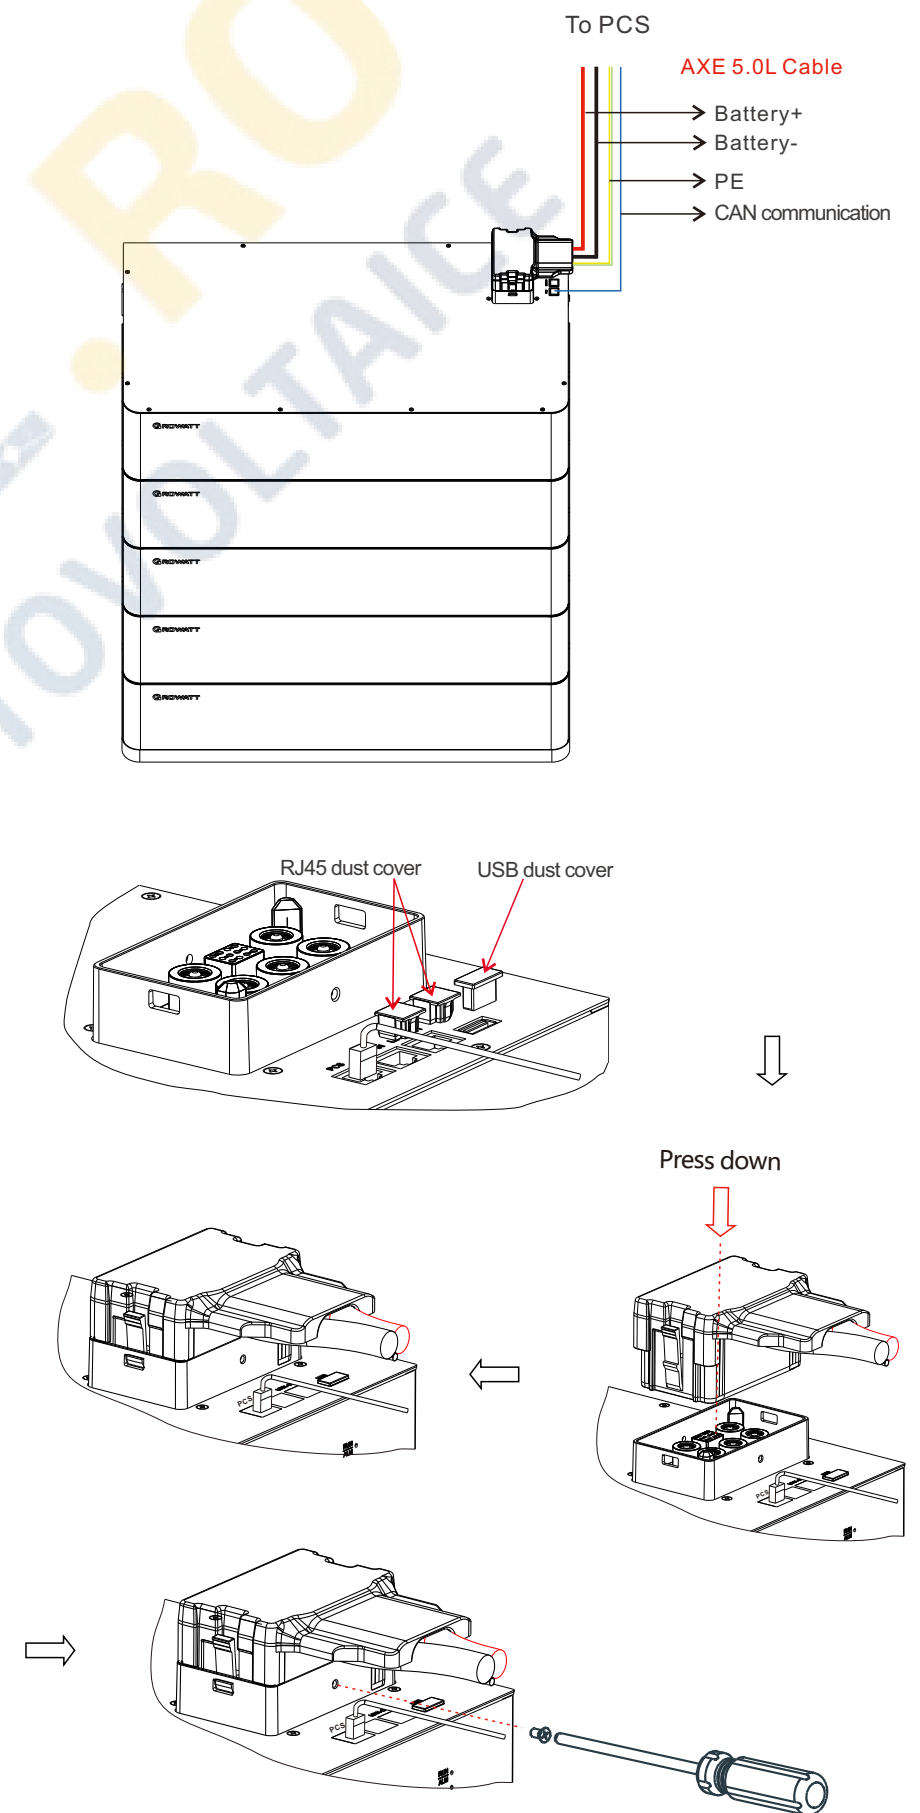

Note: 1) Please install the communication line first, then plug the unused RJ45 port and USB port with a dust cover, and finally install the power line.
2) No cable connection required between battery packs in a single battery cluster.